


Power Range	Description
Peak Current	60 A
Continuous Current	30 A
Supply Voltage	10 - 80 VDC

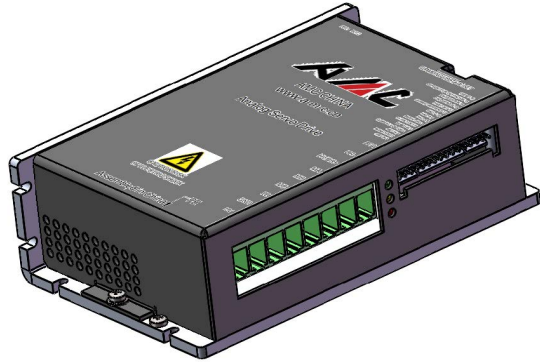


The CAB60A80 PWM servo drive is designed to drive brushless and brushed DC motors at a high switching frequency. The CAB60A80 is fully protected against over-voltage, under-voltage, over-current, over-heating and short-circuits. A single digital output indicates operating status. The drive interfaces with digital controllers that have analog +/-10V output.

See Part Numbering Information on last page of datasheet for additional ordering options.

Features	
➤ High Power Density	➤ Wide Temperature Range
➤ Compact Size	➤ High Performance Thermal Dissipation
➤ Built-in regenerative and shunt regulator	➤ Differential Input Command
➤ Lightweight	➤ Current Monitor Output
➤ High Switching Frequency	➤ Digital Fault Output Monitor
➤ Four Quadrant Regenerative Operation	➤ 12VDC Operation

<p>HARDWARE PROTECTION</p> <ul style="list-style-type: none"> ▪ Over-Voltage ▪ Under-Voltage ▪ Over-Current ▪ Over-Temperature ▪ Short-circuit (phase-phase) ▪ Short-circuit (phase-ground) 	<p>MODES OF OPERATION</p> <ul style="list-style-type: none"> ▪ Current
<p>INPUTS/OUTPUTS</p> <ul style="list-style-type: none"> ▪ Digital Fault Output ▪ Digital Inhibit Input ▪ Analog Current Monitor ▪ Analog Command Input ▪ Analog Current Reference 	<p>COMMUTATION</p> <ul style="list-style-type: none"> ▪ Trapezoidal
<p>FEEDBACK SUPPORTED</p> <ul style="list-style-type: none"> ▪ Hall Sensors 	<p>MOTORS SUPPORTED</p> <ul style="list-style-type: none"> ▪ Three Phase (Brushless) ▪ Single Phase (Brushed, Voice Coil, Inductive Load)
	<p>COMMAND SOURCE</p> <ul style="list-style-type: none"> ▪ ±10 V Analog

BLOCK DIAGRAM

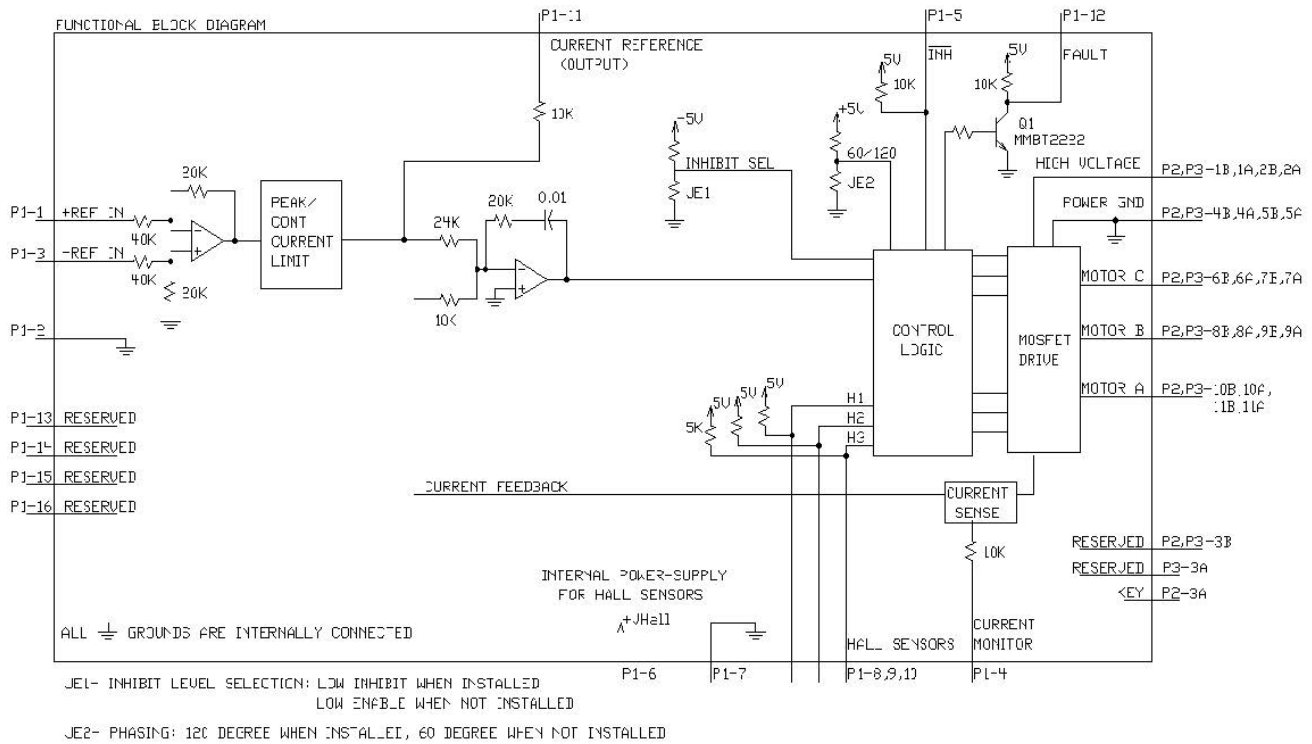

HARDWARE SETTINGS

Jumper Settings

Jumpers are SMT, 0 ohm resistors located on the underside of the drive PCB. By default, the drive is configured with the jumpers installed. Typical drive operation will not require the jumpers to be removed. Please contact the factory before jumper removal.

Jumper	Description	Configuration	
		Not Installed	Installed
JE1	Inhibit logic. Sets the logic level of inhibit pins. Labeled JE1 on the PCB of the drive.	Low Enable	Low Inhibit
JE2	Hall sensor phasing. Selects 120 or 60 degree commutation phasing. Labeled JE2 on the PCB of the drive.	60 degree	120 degree

Notes:

Any damage done to the drive while performing these modifications will void the product warranty. It is recommended to contact AMC China's technical staff before setting of JPE1 and JPE2.

SPECIFICATIONS


Power Specifications		
Description	Units	Value
DC Supply Voltage Range	VDC	10 - 80
DC Bus Under Voltage Limit	VDC	9
DC Bus Over Voltage Limit	VDC	88
Maximum Peak Output Current ¹	A	60
Maximum Continuous Output Current	A	30
Maximum Continuous Output Power	W	2280
Maximum Power Dissipation at Continuous Current	W	120
Minimum Load Inductance (Line-To-Line) ²	μH	100
Internal Bus Capacitance ³	μF	641
Low Voltage Supply Outputs	-	+6 VDC (30 mA)
Switching Frequency	kHz	31
Control Specifications		
Description	Units	Value
Command Sources	-	±10 V Analog
Feedback Supported	-	Halls
Commutation Methods	-	Trapezoidal
Modes of Operation	-	Current
Motors Supported	-	Three Phase (Brushless), Single Phase (Brushed, Voice Coil, Inductive Load)
Hardware Protection	-	Invalid Commutation Feedback, Over Current, Over Temperature, Over Voltage, Short Circuit (Phase-Phase & Phase-Ground)
Mechanical Specifications		
Description	Units	Value
Size (H x W x D)	mm	145 x 92 x 44
Operating Temperature Range	°C (°F)	0 - 75 (32 - 185)
Storage Temperature	°C (°F)	-40 - 85 (32 - 185)
Relative Humidity	-	0 - 90% Non-Condensing
P1 Connector		16 Pin, pitch 2.54 mm connector
P2 Connector		8Pin pitch 7.62 mm Pluggable terminal block

Notes


1. Maximum duration of peak current is ~2 seconds. Peak RMS value must not exceed continuous current rating of the drive.
2. Lower inductance is acceptable for bus voltages well below maximum. If the motor inductance is lower than the minimum inductance, please contact the factory for customized modification.

PIN FUNCTIONS

P1 Signal Interface Definitions		
Connector information		16 Pin, pitch 2.54 mm connector
Matching Connector	Part No.	Molex: P/N 22-01-3167 (Housings) and P/N 08-50-0114 (CRIMP TERMINAL)
	Remark	Connectors need to be ordered separately
Pin	Signal	Description
1	+REF IN	Differential Reference Input (± 10 V Operating Range, ± 15 V Maximum Input)
2	SIGNAL GND	Signal Ground
3	-REF IN	Differential Reference Input (± 10 V Operating Range, ± 15 V Maximum Input)
4	CURRENT MONITOR	Current Monitor. Analog output signal proportional to the actual current output. Polarity is reversed from command voltage. Scaling is 20 A/V. Measure relative to signal ground.
5	INHIBIT IN	TTL level (+5 V) inhibit/enable input. Leave open to enable drive. Pull to ground to inhibit drive. Inhibit turns off all power devices.
6	+V HALL OUT	Low Power Supply For Hall Sensors (+6 V @ 30 mA). Referenced to signal ground. Short circuit protected.
7	SIGNAL GND	Signal Ground
8	HALL 1	Single-ended Hall/Commutation Sensor Inputs (+5 V logic level)
9	HALL 2 ¹	
10	HALL 3	
11	CURRENT REFERENCE	Measures the command signal to the internal current-loop. This pin has a maximum output of ± 7.3 V when the drive outputs maximum peak current. Measure relative to signal ground.
12	FAULT OUT	TTL level (+5 V) output becomes high when power devices are disabled due to at least one of the following conditions: inhibit, invalid Hall state, output short circuit, over voltage, over temperature, power-up reset.
13	RESERVED	RESERVED
14	RESERVED	
15	RESERVED	
16	RESERVED	

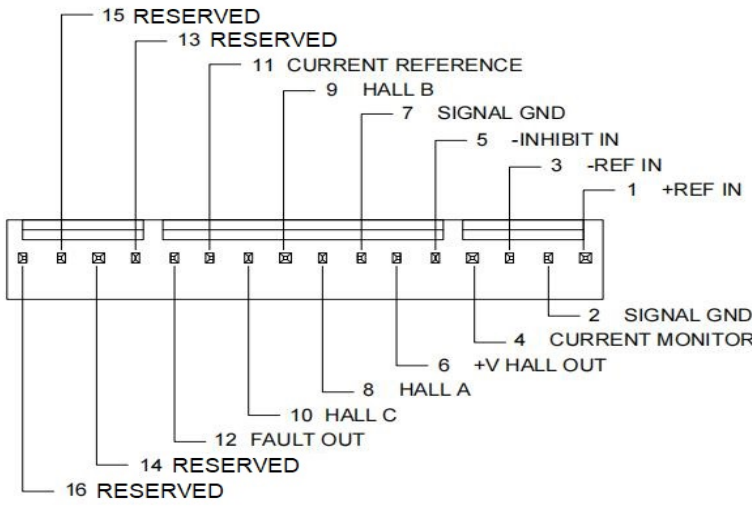





1. For use with Single Phase (Brushed) motors, ground Hall 2 and only connect motor leads to Motor A and Motor B.

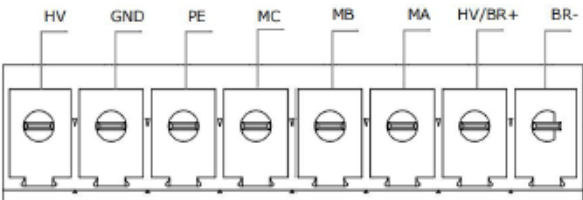P2 Power Interface Definitions		
Connector information		8Pin pitch 7.62 mm Pluggable terminal block
Matching Connector	Part No.	KF2EDGSK-7.62mm/KF2EDGAK-7.62mm
	Remark	Connectors need to be ordered separately
Pin	Signal	Description
1	HV	DC+ Power Input
2	GND	Power Ground (Common With Signal Ground).
3	PE	Protective ground (Connect motor cable shield)
4	MC	Motor Phase W
5	MB	Motor Phase V
6	MA	Motor Phase U
7	HV/BR+	External braking resistor connection. Connect a resistor between BR+ and BR-.
8	BR-	
		

Golden Ding Series Analog Servo Drives



DIMENSIONS (mm)

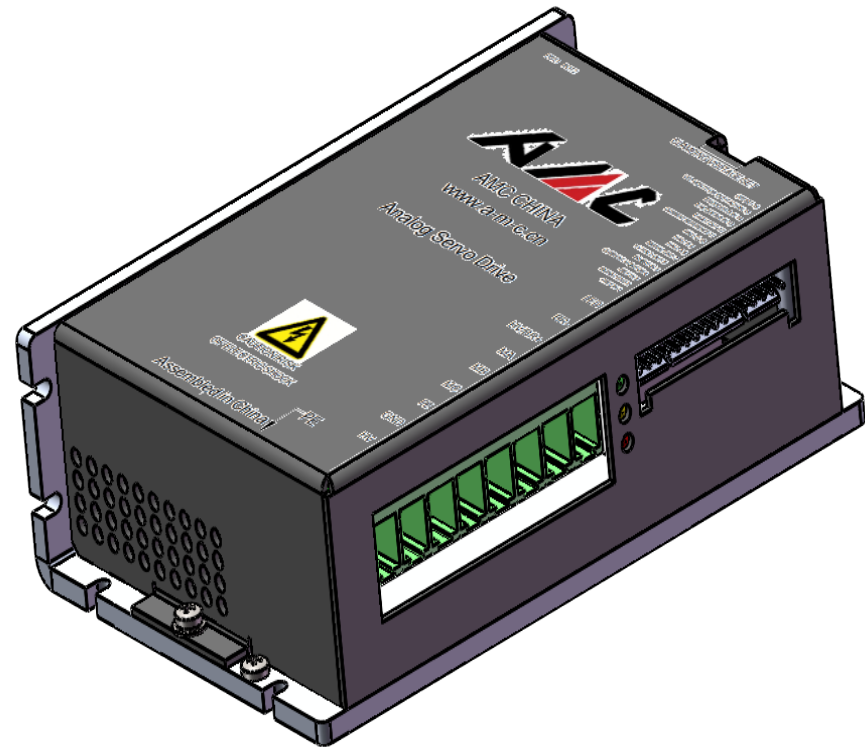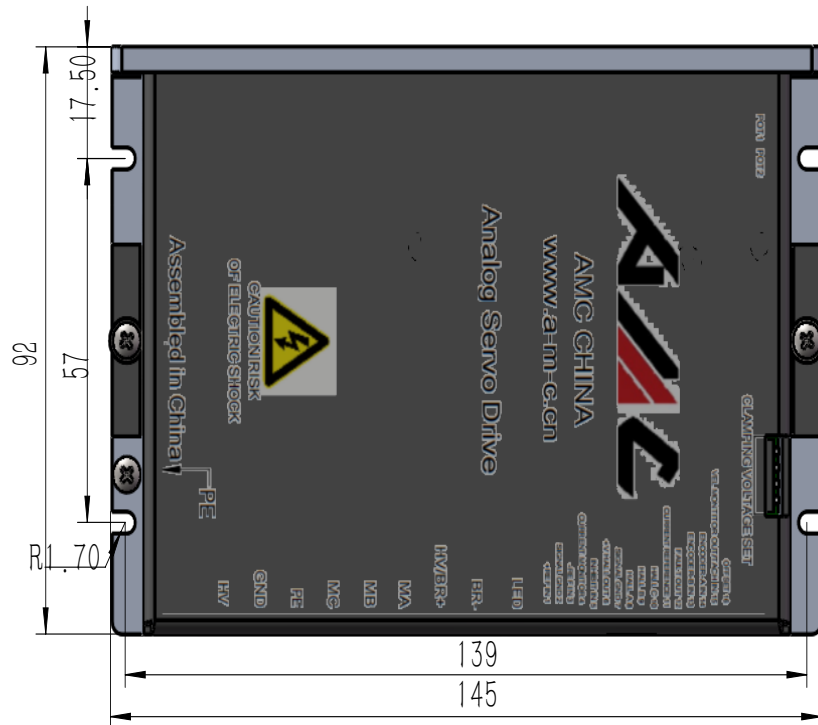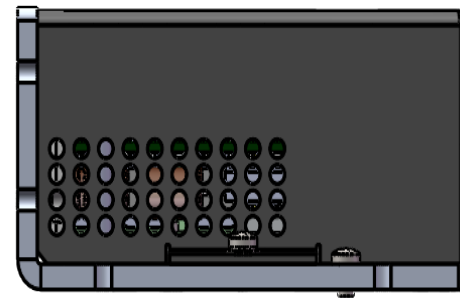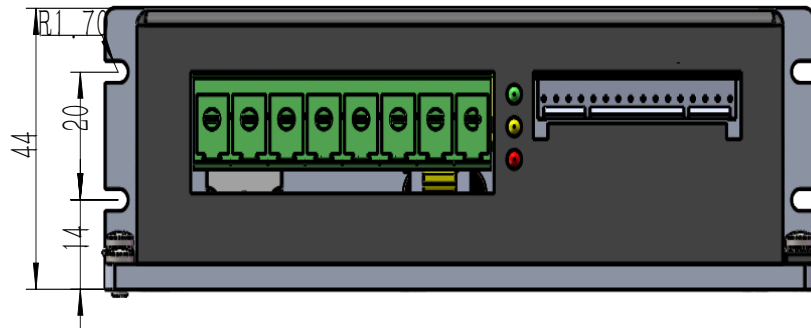

PART NUMBERING INFORMATION

