## **Golden Ding Series Analog Servo Drives**



# Power Range Peak Current 20A Continuous Current 12A Supply Voltage 10 - 80VDC



#### Description

The CAB20A80 PWM servo drive is designed to drive brushless and brushed DC motors at a high switching frequency. The CAB20A80 is fully protected against over-voltage, under-voltage, over-current, over-heating and short-circuits. A single digital output indicates operating status. The drive interfaces with digital controllers that have analog +/-10V output.

See Part Numbering Information on last page of datasheet for additional ordering options.

#### **Features**

- High Power Density
- Compact Size
- Built-in regenerative and shunt regulator
- Lightweight
- High Switching Frequency
- Four Quadrant Regenerative Operation

- Wide Temperature Range
- ► High Performance Thermal Dissipation
- Differential Input Command
- Current Monitor Output
- Digital Fault Output Monitor
- ➤ 12VDC Operation

#### HARDWARE PROTECTION

- Over-Voltage
- Under-Voltage
- Over-Current
- Over-Temperature
- Short-circuit (phase-phase)
- Short-circuit (phase-ground)

#### **INPUTS/OUTPUTS**

- Digital Fault Output
- Digital Inhibit Input
- Analog Current Monitor
- Analog Command Input
- Analog Current Reference

#### **FEEDBACK SUPPORTED**

Hall Sensors

#### **MODES OF OPERATION**

Current

#### COMMUTATION

Trapezoidal

#### **MOTORS SUPPORTED**


- Three Phase (Brushless)
- Single Phase (Brushed, Voice Coil, Inductive Load)

#### **COMMAND SOURCE**

±10 V Analog



#### **BLOCK DIAGRAM**

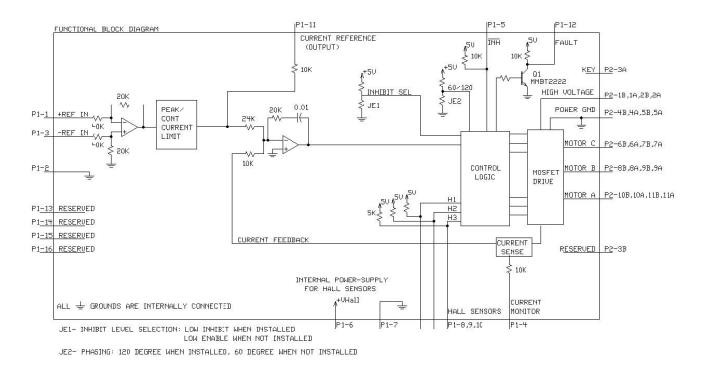

#### HARDWARE SETTINGS

#### **Jumper Settings**

Jumpers are SMT, 0 ohm resistors located on the underside of the drive PCB. By default, the drive is configured with the jumpers installed. Typical drive operation will not require the jumpers to be removed. Please contact the factory before jumper removal.

Jumpe	Description	Configuration	
	SMT Jumper(0Ω Resustor)	Not Installed	Installed
JE1	Inhibit logic. Sets the logic level of inhibit pins. Labeled JE1 on the PCB of the drive.	Low Enable	Low Inhibit
JE2	Hall sensor phasing. Selects 120 or 60 degree commutation phasing. Labeled JE2 on the PCB of the drive.	60 degree	120 degree

#### Notes:

Any damage done to the drive while performing these modifications will void the product warranty.It is recommended to contact AMC China's technical staff before setting of JPE1 and JPE2.

## **Golden Ding Series Analog Servo Drives**



#### **SPECIFICATIONS**

Power Specifications						
Description	Units	Value				
DC Supply Voltage Range	VDC	10 - 80				
DC Bus Under Voltage Limit	VDC	9				
DC Bus Over Voltage Limit	VDC	88				
Maximum Peak Output Current <sup>1</sup>	Α	20				
Maximum Continuous Output Current	Α	12				
Maximum Continuous Output Power	W	912				
Maximum Power Dissipation at Continuous Current	W	48				
Minimum Load Inductance (Line-To-Line) <sup>2</sup>	μH	100				
Internal Bus Capacitance	μF	394				
Low Voltage Supply Outputs	-	+6 VDC (30 mA)				
Switching Frequency	kHz	31				
Control Specifications						
Description	Units	Value				
Command Sources	-	±10 V Analog				
Feedback Supported	-	Halls				
Commutation Methods	-	Trapezoidal				
Modes of Operation	-	Current				
Motors Supported	-	Three Phase (Brushless), Single Phase (Brushed, Voice Coil, Inductive Load)				
Hardware Protection	-	Invalid Commutation Feedback, Over Current, Over Temperature, Over Voltage Short Circuit (Phase-Phase & Phase-Ground)				
Mechanical Specifications						
Description	Units	Value				
Size (H x W x D)	mm	127 x 77.5 x 44.5				
Operating Temperature Range °		0 - 75 (32 - 185)				
StorageTemperature	°C (°F)	-40 - 85 (32 - 185)				
Relative Humidity	-	0 - 90% Non-Condensing				
P1 Connector		16 Pin, pitch 2.54 mm connector				
P2 Connector		8Pin pitch 5.08 mm Pluggable terminal block				

#### Notes

- 1. Maximum duration of peak current is ~2 seconds. Peak RMS value must not exceed continuous current rating of the drive.
- 2. Lower inductance is acceptable for bus voltages well below maximum. If the motor inductance is lower than the minimum inductance, please contact the factory for customized modification.



#### **PIN FUNCTIONS**


P1 Signal Interface Definitions						
Connector information		formation	16 Pin, pitch 2.54 mm connector			
Matching Part No.		Part No.	Molex: P/N 22-01-3167 (Housings) and P/N 08-50-0114 (CRIMP TERMINAL)			
Connector Remark		Remark	Connectors need to be ordered separately			
Pin		Signal	Description			
1	+	REF IN	Differential Reference Input (±10 V Operating Range, ±15 V Maximum Input)			
2	SIG	NAL GND	Signal Ground			
3	3 -REF IN		Differential Reference Input (±10 V Operating Range, ±15 V Maximum Input)			
4 CURRENT MONITOR		NT MONITOR	Current Monitor. Analog output signal proportional to the actual current output. Polarity is reversed from command voltage. Scaling is 6.4 A/V. Measure relative to signal ground.			
5 INHIBIT IN		HIBIT IN	TTL level (+5 V) inhibit/enable input. Leave open to enable drive. Pull to ground to inhibit drive. Inhibit turns off all power devices.			
6	6 +V HALL OUT		Low Power Supply For Hall Sensors (+6 V @ 30 mA). Referenced to signal ground. Short circuit protected.			
7	SIG	NAL GND	Signal Ground			
8		HALL 1				
9		HALL 2 <sup>1</sup>	Single-ended Hall/Commutation Sensor Inputs (+5 V logic level)			
10		HALL 3	Massacrass the assessment signal to the internal surrount last. This win has a			
11	CURREN	T REFERENCE	Measures the command signal to the internal current-loop. This pin has a maximum output of ±7.45 V when the drive outputs maximum peak current. Measure relative to signal ground.			
12	FAL	ULT OUT	TTL level (+5 V) output becomes high when power devices are disabled due to at least one of the following conditions: inhibit, invalid Hall state, output short circuit, over voltage, over temperature, power-up reset.			
13	RESE	RVED	Short chedit, over voltage, over temperature, power-up reset.			
14		RVED				
15		RVED .	RESERVED			
16	RESE	RVED				
	15 RESERVED  13 RESERVED  11 CURRENT REFERENCE  9 HALL B  7 SIGNAL GND  1 + REF IN  2 SIGNAL GND  4 CURRENT MONITOR  8 HALL A  10 HALL C  14 RESERVED  16 RESERVED					

1. For use with Single Phase (Brushed) motors, ground Hall 2 and only connect motor leads to Motor A and Motor B.

# **Golden Ding Series Analog Servo Drives**





P2 Power Interface Definitions					
Connector information			8Pin pitch 5.08 mm Pluggable terminal block		
Matching		Part No.	KF2EDGK5.08		
Conne	-	Remark	Connectors need to be ordered separately		
Pin	n Signal		Description		
1		HV DC+ Power Input			
2	GND Power Ground (Common With Signal Ground).		Power Ground (Common With Signal Ground).		
3	PE		Protective ground (Connect motor cable shield)		
4	MC		Motor Phase W		
5	MB Motor Phase V		Motor Phase V		
6		MA	Motor Phase U		
7		HV/BR+	External braking resistor connection. Connect a resistor between BR+		
8		BR-	and BR		
		1HV	2GND 3PE 4MC 5MB 6MA 7HV/BR 8BR-		

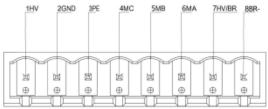



### **DIMENSIONS (mm)**

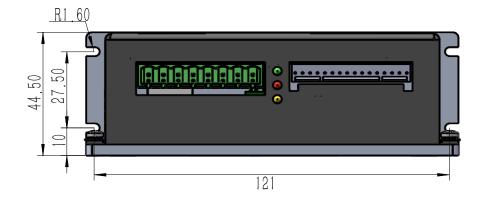

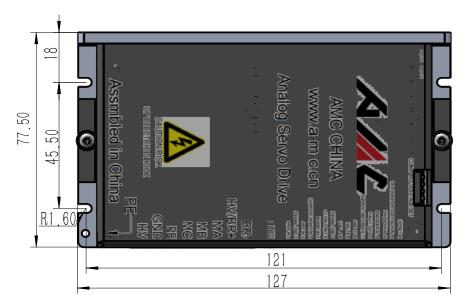




Version 1.1



#### PART NUMBERING INFORMATION

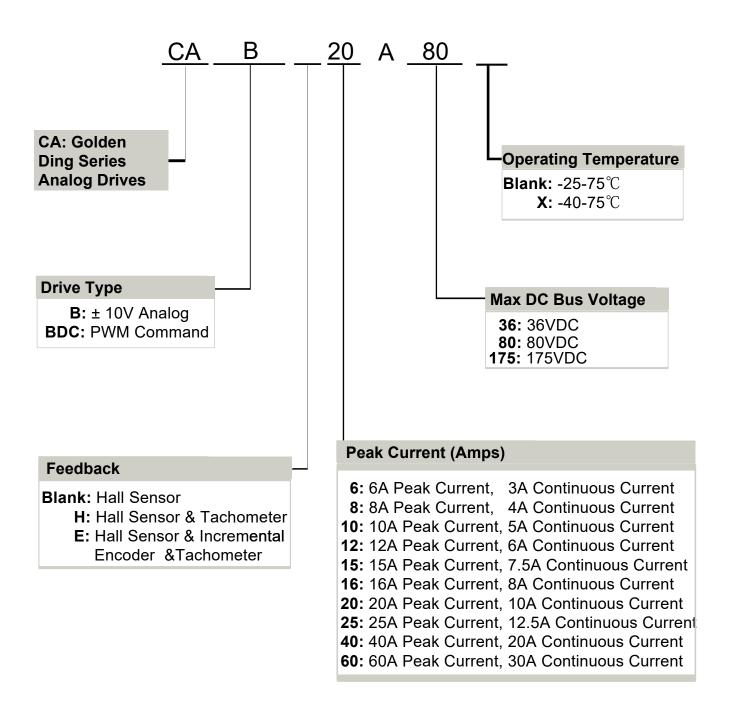

Version 1.1