

| Power Range        |             |  |  |  |
|--------------------|-------------|--|--|--|
| Peak Current       | 15 A        |  |  |  |
| Continuous Current | 7.5 A       |  |  |  |
| Supply Voltage     | 10 - 80 VDC |  |  |  |
| 4                  |             |  |  |  |



#### Description

The CABE15A80X PWM servo drive is designed to drive brushless and brushed DC motors at a high switching frequency. The CABE15A80X is fully protected against overvoltage, under-voltage, over-current, over-heating, invalid commutation, and short-circuits. A single digital output indicates operating status. The drive interfaces with digital controllers that have analog  $\pm 10V$  output. The CABE15A80X can utilize either guadrature encoder inputs or Tachometer feedback for velocity control.

The CABE15A80X conforms to the following specifications and is designed to the Environmental Engineering Considerations as defined in MIL-STD-810F.

| Extended Environment Performance           |  |  |  |
|--|--|--|--|
| -40°C to +85°C (-40°F to +185°F)           |  |  |  |
| -50°C to +100°C (-58°F to +212°F)          |  |  |  |
| -40°C to +85°C (-40°F to +185°F) in 2 min. |  |  |  |
| 0 to 95% Non-Condensing                    |  |  |  |
| 30 Grms for 5 min. in 3 axes               |  |  |  |
|  |  |  |  |

See Part Numbering Information on last page of datasheet for additional ordering options.

Encoder Velocity Mode

**Digital Fault Output Monitor** 

#### **Features**

- $\geq$ Four Quadrant Regenerative Operation
- $\triangleright$ Built-in regenerative and shunt regulator
- $\triangleright$ Lightweight
- $\geq$ High Switching Frequency
- Wide Temperature Range
- $\triangleright$ **High Performance Thermal Dissipation**

### HARDWARE PROTECTION

- Over-Voltage .
- Under-Voltage
- **Over-Current**
- **Over-Temperature**
- Short-circuit (phase-phase)
- Short-circuit (phase-ground)

### **INPUTS/OUTPUTS**

- . **Digital Fault Output**
- **Digital Inhibit Input**
- Analog Current Monitor
- Analog Command Input
- Analog Current Reference

### COMMUTATION

Trapezoidal

### FEEDBACK SUPPORTED

- Incremental Encoder
- Hall Sensors
- Tachometer (± 60 VDC)

# MODES OF OPERATION

- Current
- Duty Cycle (Open Loop)
- Encoder Velocity
- **Tachometer Velocity**

### MOTORS SUPPORTED

- Three Phase (Brushless)
- Single Phase (Brushed, Voice Coil, Inductive Load)

### COMMAND SOURCE

±10 V Analog

### AGENCY APPROVALS & COMPLIANCE CONSIDERATIONS

- MIL-STD-810F (as stated)
- MIL-STD-1275D (optional)
- MIL-STD-461E (optional)
- MIL-STD-704F (optional)
- MIL-HDBK-217 (optional)

### $\geq$ Current Monitor Output

- Compact Size
- $\geq$ **High Power Density**

12VDC Operation

# $\triangleright$

 $\geq$ 

 $\geq$ 

 $\geq$ 



### SPECIFICATIONS


| Description  | -            | ecifications  |
|--|--------------|---|
| •  | Units<br>VDC | Value   |
| DC Supply Voltage Range  | VDC          | 88  |
| DC Bus Over Voltage Limit  |              | 9   |
| DC Bus Under Voltage Limit<br>Maximum Peak Output Current <sup>1</sup> | VDC          | 9   |
| •  | A            |   |
| Maximum Continuous Output Current                                      | A            | 7.5   |
| Maximum Continuous Output Power  | W            | 570   |
| Maximum Power Dissipation at Continuous Current                        | W            | 30  |
| Minimum Load Inductance (Line-To-Line) <sup>2</sup>                    | μH           | 100   |
| Internal Bus Capacitance <sup>3</sup>                                  | μF           | 394   |
| Low Voltage Supply Outputs   | -            | +6 VDC (30 mA)  |
| Switching Frequency  | kHz          | 31  |
|  |              | Specifications  |
| Description  | Units        | Value   |
| Command Sources  | -            | ±10 V Analog  |
| Feedback Supported   | -            | Halls   |
| Commutation Methods  | -            | Trapezoidal   |
| Modes of Operation   | -            | Current   |
| Motors Supported   | -            | Single Phase (Brushed, Voice Coil, Inductive Load), Three Phase (Brushless)   |
| Hardware Protection  | -            | Invalid Commutation Feedback, Over Current, Over Temperature, Over Voltage, Under Voltage, Short Circuit (Phase-Phase & Phase-Ground) |
|  | Mechanic     | al Specifications   |
| Description  | Units        | Value   |
| Agency Approvals   | -            | MIL-STD-810F (as stated), MIL-STD-1275D (optional), MIL-STD-461E (optional), MIL-STD-704F (optional), MIL-HDBK-217 (optional)         |
| Size (H x W x D)   | mm           | 127 x 77.5 x 44.5   |
| Baseplate Operating Temperature Range                                  | °C (°F)      | -40 - 105 (-40 - 221)   |
| Ambient Temperature Range  | °C (°F)      | -40 - 85 (-40 - 185)  |
| Storage Temperature Range °C (°F) -50 - 100 (-58 -                     |              | -50 - 100 (-58 - 212)   |
| Thermal Shock °C (   |              | -40 - 85 (-40 - 185) in 2 minutes   |
| Vibration  | Grms         | 30 for 5 minutes in 3 axes  |
| Relative Humidity - 0 - 95% Non-Condensing                             |              | 0 - 95% Non-Condensing  |
| P1 Connector - 16 Pin, pitch 2.54 mm connector                         |              | 16 Pin, pitch 2.54 mm connector   |
| P2 Connector   | -            | 8Pin pitch 5.08 mm Pluggable terminal block   |

### Notes

- 1. Maximum duration of peak current is ~2 seconds. Peak RMS value must not exceed continuous current rating of the drive.
- 2. Lower inductance is acceptable for bus voltages well below maximum. If the motor inductance is lower than the minimum inductance, please contact the factory for customized modification.



## **BLOCK DIAGRAM**

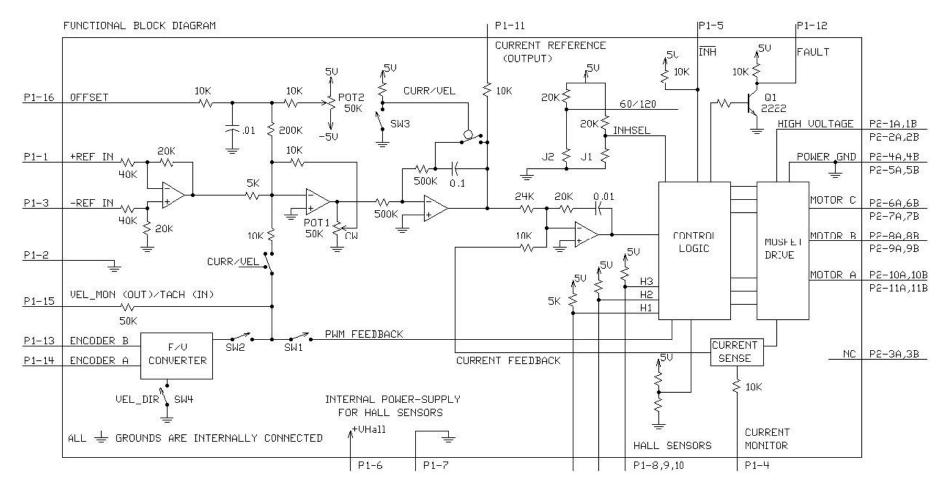

| Information on Approvals and Compliances   |  |  |  |
|--|--|--|--|
| MIL-STD-810F   | MIL-STD-810F Environmental Engineering Considerations and Laboratory Tests - (as stated)         |  |  |
| MIL-STD-1275D  | MIL-STD-1275D Characteristics of 28 Volt DC Electrical Systems in Military Vehicles - (optional) |  |  |
| MIL-STD-461E Requirements for the Control of Electromagnetic Interference Characteristics of Subsystems and Equipment - (optional) |  |  |  |
| MIL-STD-704F   | F Aircraft Electric Power Characteristics - (optional)   |  |  |
| MIL-HDBK-217 Reliability Prediction of Electronic Equipment (MTBF) - (optional)  |  |  |  |



### HARDWARE SETTINGS

### **Switch Functions**

The DIP Switch bank is located on the underside of the drive. The tables below describe switch functionality.

| Switch | Description   | Setting      |             |  |
|--------|---|--------------|-------------|--|
| Switch |   | On           | Off         |  |
| 1      | 1 Duty Cycle mode selector. Activates internal PWM feedback.  |              | Other modes |  |
| 2      | Activate velocity feedback or monitor. For<br>Encoder Velocity mode, activates feedback. For<br>Current mode, activates velocity monitor.   | Active       | Inactive    |  |
| 3      | Current mode selector.  | Current mode | Other modes |  |
| 4      | <ul> <li>Velocity feedback polarity. Changes the polarity of the internal feedback signal and the velocity monitor output signal. Inversion of the feedback polarity may be required to prevent a motor runaway condition.</li> </ul> |              | Inverted    |  |

#### Mode Selection Table

|                     | SW1 | SW2 | SW3 |
|---------------------|-----|-----|-----|
| CURRENT             | OFF | ON  | ON  |
| DUTY CYCLE          | ON  | OFF | OFF |
| ENCODER VELOCITY*   | OFF | ON  | OFF |
| TACHOMETER VELOCITY | OFF | OFF | OFF |

\*NOTE: See details of switch 4 for further Encoder Velocity configuration information.

### Jumper Settings

Jumpers are SMT, 0 ohm resistors located on the underside of the drive PCB. By default, the drive is configured with the jumpers installed. Typical drive operation will not require the jumpers to be removed. Please contact the factory before jumper removal.

| Jumper   |  | Configuration |             |  |
|--|--|---------------|-------------|--|
|  | SMT Jumper (0Ω Resistor)   | Not Installed | Installed   |  |
| JE1  | Inhibit logic. Sets the logic level of inhibit pins.<br>Labeled JE1 on the PCB of the drive. | Low Enable    | Low Inhibit |  |
| JE2 Hall sensor phasing. Selects 120 or 60 degree commutation phasing. Labeled JE2 on the PCB drive. |  | 60 degree     | 120 degree  |  |

### **Potentiometer Functions**

Potentiometers are located between the PCB and the drive baseplate, and are accessible from the side. Potentiometers are approximately linear and have 12 active turns with 1 inactive turn on each end.

| Potentiometer  | Description  | Turning CW                           |
|--|--|--------------------------------------|
| Loop gain adjustment for duty cycle / velocity<br>modes. Turn this pot fully CCW in current mode.<br>Located closest to the corner of the PCB.Increases gain |  | Increases gain                       |
| 2  | Offset. Used to adjust any imbalance in the input signal or in the amplifier. Located furthest from the corner of the PCB. | Adjusts offset in negative direction |



### **PIN FUNCTIONS**

| P1 Signal Interface Definitions |                      |                     |  |  |
|---------------------------------|----------------------|---------------------|--|--|
| (                               | Connector in         | formation           | 16 Pin, pitch 2.54 mm connector  |  |
| Matching Part No.               |                      | Part No.            | Molex: P/N 22-01-3167 (Housings) and P/N 08-50-0114 (CRIMP TERMINAL)   |  |
|                                 | onnector             | Remark              | Connectors need to be ordered separately   |  |
| Pin                             |                      | Signal              | Description  |  |
| 1                               |                      | REF IN              | Differential Reference Input (±10 V Operating Range, ±15 V Maximum Input)  |  |
| 2                               |                      | NAL GND             | Signal Ground  |  |
| 3                               | -F                   | REF IN              | Differential Reference Input (±10 V Operating Range, ±15 V Maximum Input)  |  |
| 4                               | CURRE                | NT MONITOR          | Current Monitor. Analog output signal proportional to the actual current<br>output. Polarity is reversed from command voltage. Scaling is 5.13 A/V.<br>Measure relative to signal ground       |  |
| 5                               | IN                   | HIBIT IN            | TTL level (+5 V) inhibit/enable input. Leave open to enable drive. Pull to ground to inhibit drive. Inhibit turns off all power devices.   |  |
| 6                               | +V F                 | IALL OUT            | Low Power Supply For Hall Sensors (+6 V @ 30 mA). Referenced to signal ground. Short circuit protected.  |  |
| 7                               | SIG                  | NAL GND             | Signal Ground  |  |
| 8                               |                      | HALL 1              |  |  |
| 9                               |                      | HALL 2 <sup>1</sup> | Single-ended Hall/Commutation Sensor Inputs (+5 V logic level)   |  |
| 10                              |                      | HALL 3              | Measures the command signal to the internal current-loop. This pin   |  |
| 11                              | 11 CURRENT REFERENCE |                     | has a maximum output of $\pm 7.3$ V when the drive outputs maximum peak current. Measure relative to signal ground.  |  |
|                                 |                      |                     | TTL level (+5 V) output becomes high when power devices are disabled due   |  |
| 12                              | FAl                  | JLT OUT             | to at least one of the following conditions: inhibit, invalid Hall state, output   |  |
| 13                              |                      | DDER-B IN           | short circuit, over voltage, over temperature, power-up reset.<br>Single-ended encoder channel B input. +5 V logic level.  |  |
| 14                              |                      | DER-A IN            | Single-ended encoder channel A input. +5 V logic level.  |  |
| 14                              |                      |                     | Velocity Monitor (±10 V range). Analog output proportional to motor speed. In  |  |
| 15                              | VEL MONIT            | OR OUT / TACH IN    | Encoder Velocity mode, output is proportional to the encoder line frequency.<br>Encoder Velocity scaling is 22 kHz/V. For Tachometer Velocity mode,<br>feedback voltage range is ± 60 VDC max. |  |
| 16                              | 0                    | FFSET               | Connection to external resistance for command offset adjustments. Apply a ±VDC (10V Max) signal through an external potentiometer into this pin to offset                                      |  |
| the input gain.                 |                      |                     |  |  |


1. For use with Single Phase (Brushed) motors, ground Hall 2 and only connect motor leads to Motor A and Motor B.



| P2 Power Interface Definitions       |            |                  |  |  |
|--------------------------------------|------------|------------------|--|--|
| Cc                                   | onnector i | nformation       | 8Pin pitch 5.08 mm Pluggable terminal block                          |  |
| Match                                | ning       | Part No.         | KF2EDGK5.08  |  |
| Conne                                |            | Remark           | Connectors need to be ordered separately                             |  |
| Pin                                  |            | Signal           | Description  |  |
| 1                                    |            | HV               | DC+ Power Input  |  |
| 2                                    |            | GND              | Power Ground (Common With Signal Ground).                            |  |
| 3                                    |            | PE               | Protective ground (Connect motor cable shield)                       |  |
| 4                                    |            | MC               | Motor Phase W  |  |
| 5                                    |            | MB Motor Phase V |  |  |
| 6                                    |            | MA Motor Phase U |  |  |
| 7                                    |            | HV/BR+           | External braking resistor connection. Connect a resistor between BR+ |  |
| 8                                    |            | BR- and BR       |  |  |
| 1HV 2GND 3PE 4MC 5MB 6MA 7HV/BR 8BR- |            |                  |  |  |



# **DIMENSIONS (mm)**

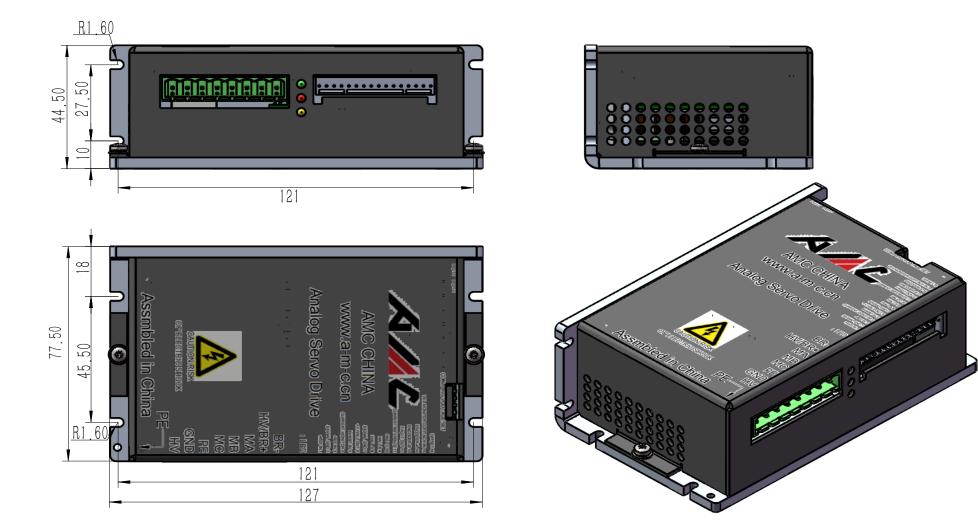



## PART NUMBERING INFORMATION

